





Osset Electric Radiator Fixing Instructions

Please unpack your delivery carefully and inspect the radiator and contents – any damages or shortages must be notified to your supplier within 3 days of delivery of your goods.

SPECIFICATIONS FOR OSSET ELECTRIC

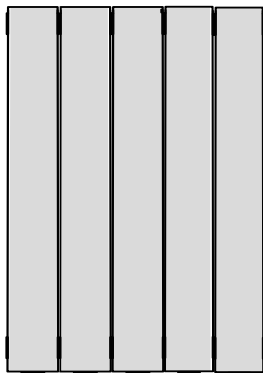

Technical Specifications

Materials Aluminium

Test Pressure 9 Bar

Testing Authority EN442


Max operation pressure 6 Bar

Max working temperature 95c

These can be cleaned using a soft damp cloth with a non-abrasive cleaning product.

Radiator Depth (once installed)

Wall to front face 120mm

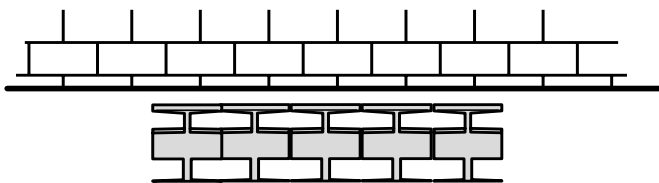

Brackets

Brackets are usually placed one section in from either end, top and bottom.

PLEASE NOTE: It is the responsibility of the installer to ensure the correct use and suitability of the fixings used. No liability for costs or damages arising from failure to do so can be accepted.

HOME



HEAT SYSTEM

HEATER
CONTROLLER
—
HORIZONTAL
VERTICAL



+
REMOTE
CONTROLLER



GUIDE & USER MANUAL


HEATER CONTROLLER H+h WiFi | REMOTE CONTROLLER H+R


H+H_WIFI_EN0121



SAFETY:

1. **The heater should be installed by a qualified person.**
2. Bathroom radiators fitted with electric heaters should be fixed not less than 60 cm from a bath, shower or wash basin, and never above abath.
3. For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
5. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. **The heater MUST BE DISCONNECTED before cleaning the casing. AVOID SOAKING THE CASING.**
7. One radiator valve must always be open when a heater is in use (liquid thermal expansion).

CAUTION: To avoid the risk of fire or electric shock the heater should be protected from water spray or flooding. This appliance is not intended for use by persons (including children) of limited physical, sensory or mental abilities, or persons inexperienced or not familiar with the appliance, unless supervised or instructed on the appliance use by persons responsible for their safety. Particular attention should be paid to children, to preclude playing with the appliance by them. Exclamation mark on triangular field signals:  **information important for the user.**

CAUTION: electric shock hazard!, lightning mark ended with arrow on triangular field 

CAUTION: in order to reduce electric shock hazard, do not remove the casing (nor its rear cover). There are no user-serviceable parts inside the appliance; the product must be returned to the manufacturer for repair via the distributor who sold the product.

GUARANTEE TERMS:

Guarantee is granted by manufacturer for 24 months period starting from date of sale, but no longer than 36 months from date of the heater manufacture. Defects revealed within this period, resulting from a fault of manufacturer will be repaired free of charge or the item replaced with new, equivalent one. Term of complaints' investigation up to 14 (fourteen) days from date of submission to the manufacturer.

Guarantee does not cover:

1. Using of product in a manner noncompliant with attached instructions.
2. Any visible damage to the heating element or controller due to improper use. Damaging of manufacturer's seals makes the guarantee null and void.

In the event that Heatpol are unable to repair or replace this product we reserve the right to refund the purchase price as an alternative.

GUARANTEE CARD

Serial No.:

Date of sale:


Stamp of retail outlet, signature of seller

MADE IN EU

Caution: The guarantee card should be legibly filled in retail outlet. Any corrections on the guarantee card will invalidate the guarantee. Guarantee card valid only with proof of purchase.


USER MANUAL: Heating element + Heater controller (horizontal) H+h

Kit content

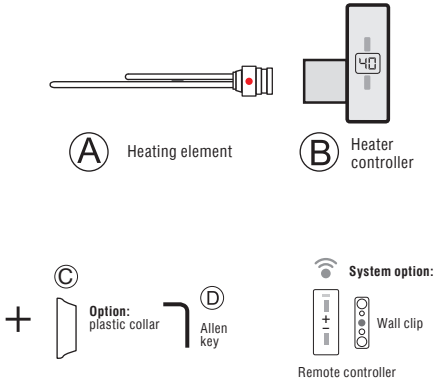

ATTENTION: Ensure the WiFi signal is present where the heater will be located

Side connection

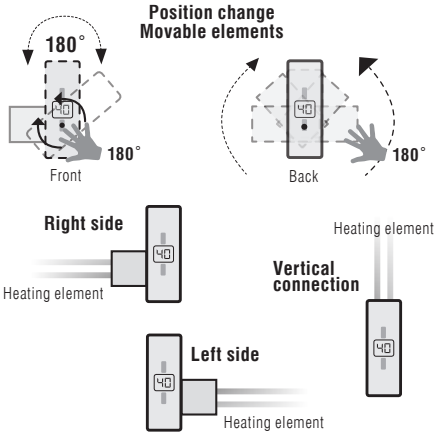


Mounting in radiators




CH system

Electric radiators




The electric heater must have a safety valve


Installation details

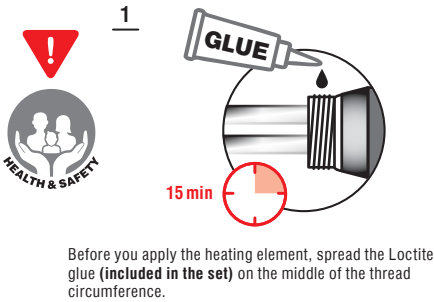

GLUE



2 The order of assembly of elements

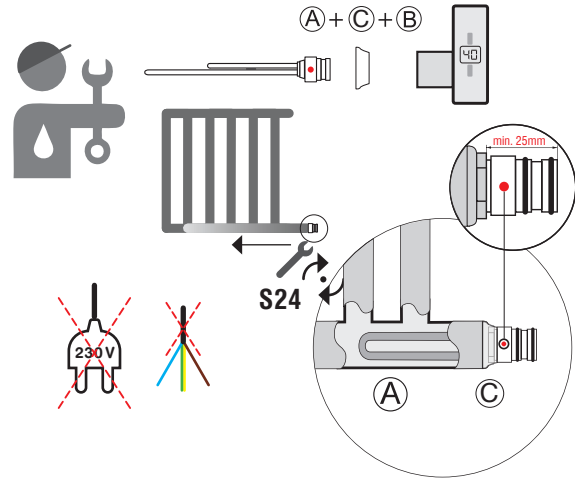



CAUTION! Do not disconnect heater controller when the system is powered.


The locking screw must be protected against accidental unscrewing eg. by applying a drop of lacquer or acrylic adhesive.

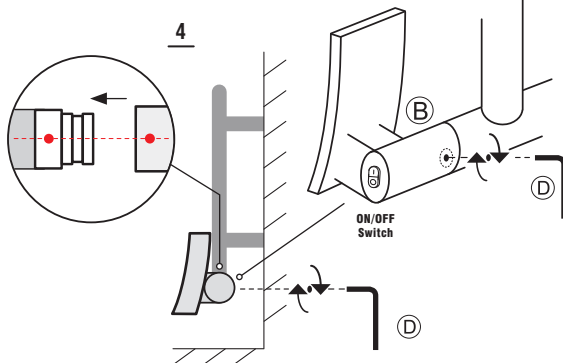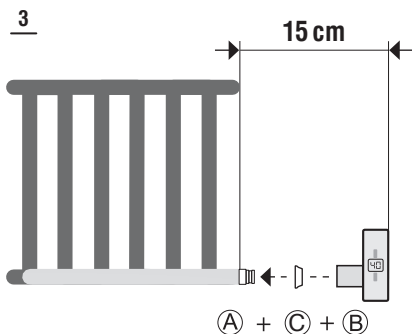

Electric radiators


CH system

5A

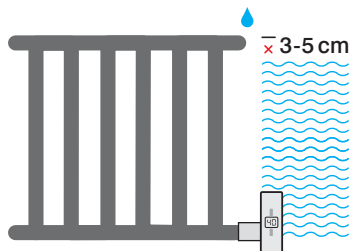


Before you apply the heating element, spread the Loctite glue (**included in the set**) on the middle of the thread circumference.


5B

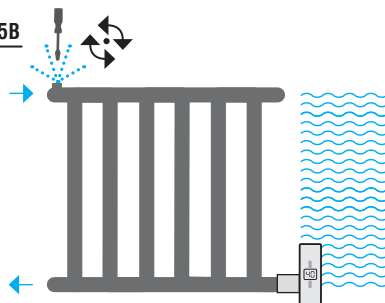

6A

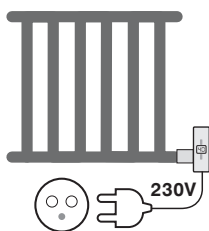


6B

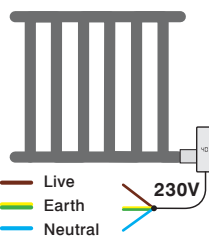


For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm

7

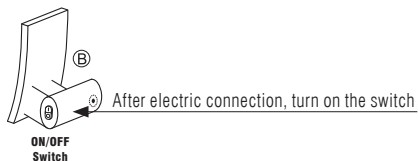


USER MANUAL: Heating element + Heater controller (vertical) H+h


Mounting in radiators

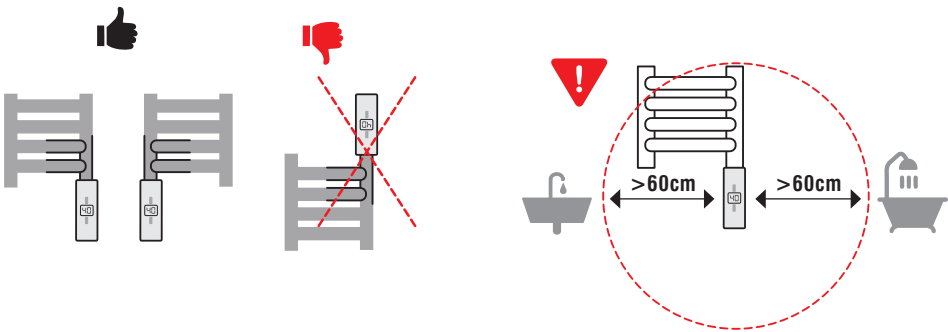


Installation options: CH system

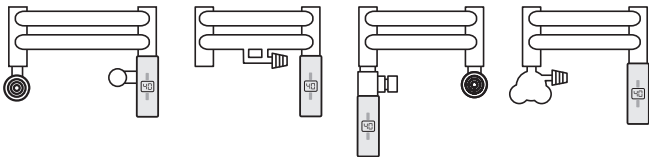

**Installation options:
electric radiator**




Installation details

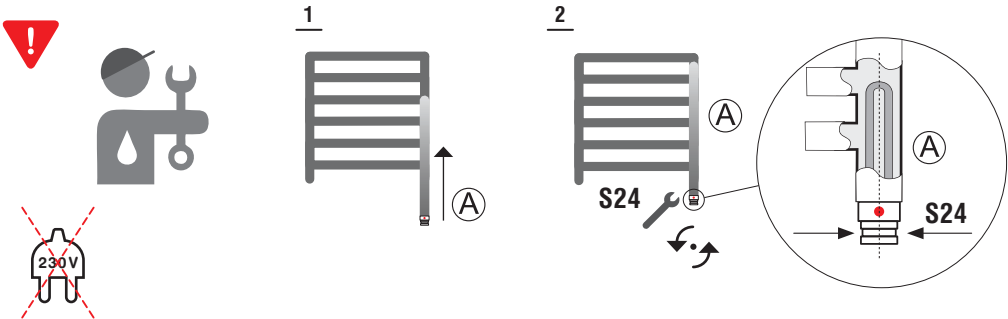



CAUTION! Do not disconnect heater controller when the system is powered.


3

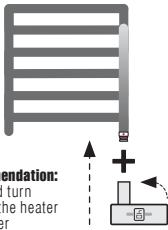


Recommendation:
Plug and turn front of the heater controller to vertical position

Electric radiators

4

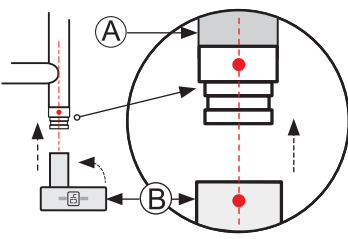


5




S22

6A

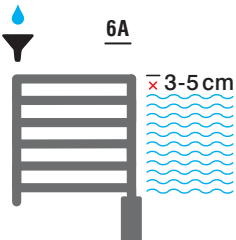


× 3-5 cm

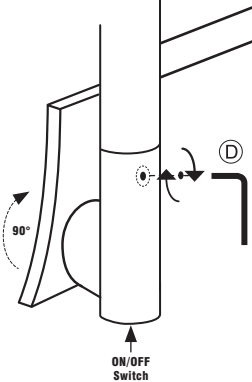

90°

ON/OFF Switch


7

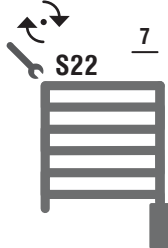

S22


CH system

6B

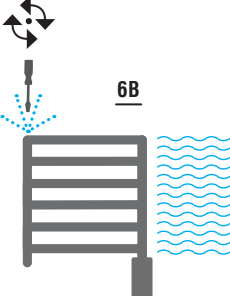


Finishing


9A Hard wire connection

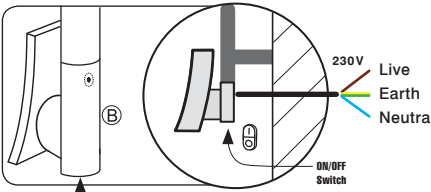

230V Live
Earth
Neutral

ON/OFF Switch






10 After electric connection, **TURN ON** the switch (concern only hard wire connection)




For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm

9B Connection with a coiled cable and a plug

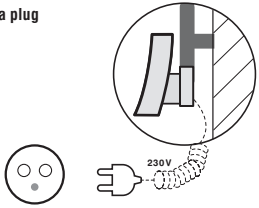

USER MANUAL: How to use heater controller (optional remote controller)

VIDEO available at www.homeplus-system.com

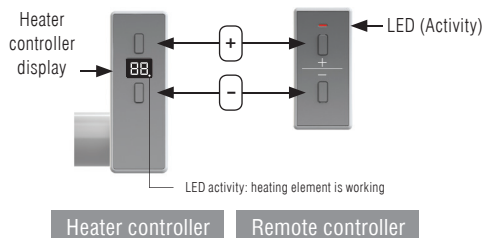

Heater controller




Connect heater controller to the heater
Use manufacturer recommendation
Turn ON the controller




Remote controller

Locate suitable place to mount the remote

Due to proper temperature reading do not place a remote controller (temperature sensor) over radiators, next to doors or in sunny places.

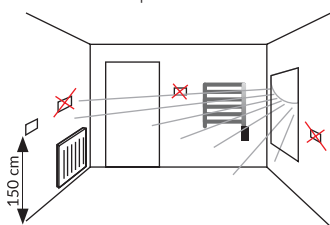






Push for pairing button using allen key to activate the controller

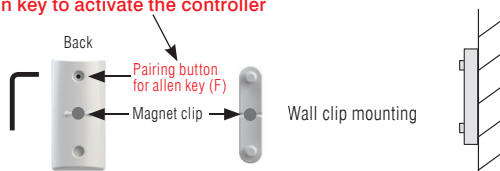


START: Heater controller and remote controller pairing

If you bought a remote controller together with H+heater you do not need to pair it!

Prepare remote controller + allen key for use ①

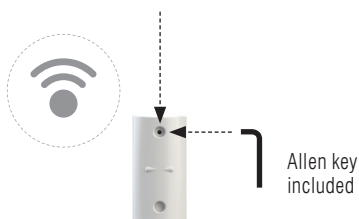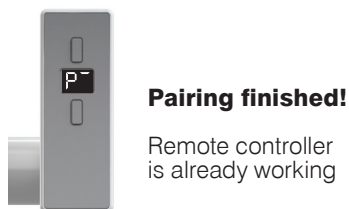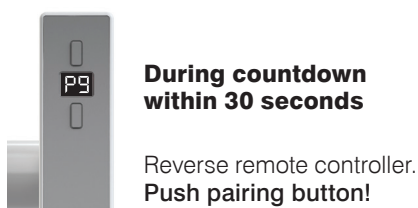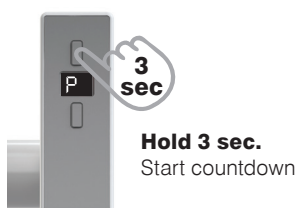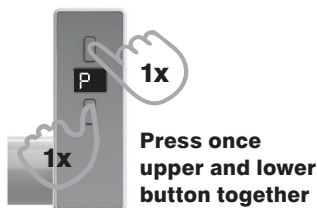

For H+h WiFi controller please download smartphone application from www.supla.org and follow the instruction.

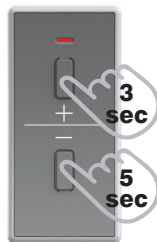

Run the heater controller via remote controller


Hold upper button for 3 seconds

Switch off the controller via remote controller

Hold lower button for 5 seconds

40°C


Standard heating temperature

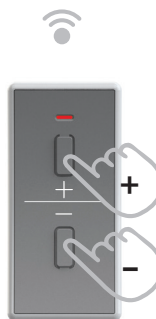

10°C - 65°C*

Select temperature

TURBO mode activation

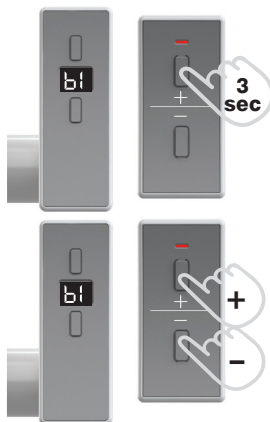

TURBO mode activation - max heating temperature

Hold button for 3 seconds


b1-b2-b3

Max heating temperature, **selection for 1/2/3 hours**


b0

Off selection

Settings water or ambient temperature

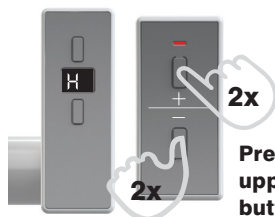

Press twice upper and lower button together

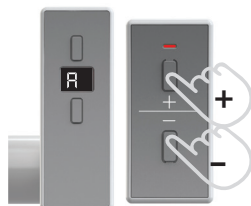

Temperature selection.

H Water temperature 10-65°C*

A Ambient temperature 10-30°C

The remote is a temperature sensor



* maximum temperature can be different according to the producer settings

Errors

- E1** Lack of water (or wrong choice of heating element to the heater)
- E2** Damaged heating element (or no power circuit)
- E3** No communication to the remote controller if paired

DO NOT DISCONNECT!

controller from heating element, when connected to the power supply





DOWNLOAD APPLICATION [SUPLA.ORG](https://supla.org)



System requirements: ANDROID 3.1/IOS 8,2 or the latest version.

Please check whether the WiFi network frequency is 2,4 GHz. WiFi module works only with this frequency.

**Install the application on your devices.
The app will easily guide you through
individual installation steps.**



TERMS AND CONDITIONS

You must immediately remove all packaging, inspect the goods and notify us of any damage to the goods within 3 days of delivery. We shall have no obligation to replace or repair damaged goods in the event of failure by the Buyer to comply with this provision. Radiators which are off an unacceptable standard or are damaged must not be installed. If any items is installed it will be treated as being as accepted as received.

Damaged goods being returned will only be collected from your delivery address, unless otherwise agreed in writing. Any other goods, which we accept back, are to be returned by you to our place of business at your expense.

Items will be accepted as a return which have not been installed or damaged after delivery. We do not accept liability for any damages sustained after delivery. Goods should be returned in their original packaging, provided such packaging and goods are undamaged.

We may issue a credit note for goods which we accept as returned.

We may agree to provide you with replacement goods prior to collecting or receiving back the goods to be returned (whether faulty, damaged or otherwise) but only on the condition that: the replacement goods are paid for in full and we reserve the right to re-invoice you in the event that the returned goods are found to be in a worse condition than when they were originally received by you or where such goods have not been received back to us within 3 months of the replacement goods being received by yourselves. A re-stocking charge of 30% will be applied to all non-faulty stock items that wish to be returned. Special order and non-stock products cannot be cancelled. Where cancellation or alteration of orders is accepted by us, you may be required to pay a restocking charge, to cover administrative costs and collection costs (if applicable); such charges to be determined by us. If the goods we deliver are faulty or damaged, we will meet the cost of the return, as long as the fault is reported to us within 3 working days.

The goods will be deemed to have been accepted when they have been delivered and we may not accept claims for any visible defects found after installation.

We accept no liability for any cost incurred relating to the cost of installation.

We shall not be liable for any plumber's costs, decorator's costs, transport costs, late penalties, or any other costs, as a direct or indirect result of (i) any defect in the goods (including but not limited to any manufacturing faults, such as leaks, that become apparent on or after installation) or (ii) late delivery of the goods.

GUARANTEES AND LIABILITIES – we are not the manufacturer of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturers. The item must have been fitted in accordance with British and or European standards as well as these fitting instructions.